

DOR-O-MATIC®

AUTOMATIC DOOR SYSTEMS

Astro/Senior/Mid-Swing Overhead Concealed and Surface Applied

Installation Instructions

DOR-O-MATIC®
Hardware Products
121 West Railroad Avenue
Princeton, IL 61356-0100
1-800-526-2400
Fax: 800-666-0472
www.lcnclosers.com

DOR-O-MATIC®
AUTOMATIC DOOR SYSTEMS
7350 West Wilson Avenue
Harwood Heights, IL 60706-4708
1-800-543-4635
708-867-7400
Engineering Fax: 708-867-1177
www.doromatic.com



Copyright © 2003 Ingersoll-Rand. All rights reserved.



IMPORTANT

Dor-O-Matic Astro Swing

The Astro Swing Power Operator System is a high energy product and **must** conform to the latest version of ANSI/BHMAA156.10 (American National Standard for Power Operated Pedestrian Doors).

The ANSI/BHMAA156.10 Standard **must** be referenced when installing or servicing an Astro Swing Power Operator System to ensure that all applicable requirements within the standard are met. These requirements include, but are not limited to:

- the use of guide rails
- the use of sensors (motion, presence, other)
- the use of finger guards
- the use of door signage
- general door performance

Additionally, the Astro-Swing Control Box instruction manual, as well as the manufacturer's instruction manual accompanying any sensor, must be referenced to ensure proper installation, set-up, and operation.

Failure to set up the Astro Swing Power Operator System per ANSI/BHMA A156.10 requirements may result in personal injury or property damage for which the installer is **LIABLE**.

Dor-O-Matic Senior and Middle Swing

The Senior Swing Power Operator System and the Middle Swing Power Operator System are low energy products and **must** conform to the latest version of ANSI/BHMAA156.19 (American National Standard for Power Operated Pedestrian Doors).

Installation Instructions

All installation instructions are valuable references and should not be discarded. They should be given to the building owner or maintenance supervisor after installation is complete.



CAUTION

Improper installation or set up may result in personal injury or property damage. Follow all instructions carefully. For answers to questions, call Dor-O-Matic at:

Automatic Door Systems

1-800-543-4635

Hardware

1-800-815-1517



IMPORTANT

These instructions are presented in step-by-step sequence. It is very important that installation begins with “1. Pre-Installation Site and Product Check” (page 4) and continues as directed after each section.



WARNING

Always disconnect main power to the operator prior to servicing or cleaning.

CONTENTS

General	3
Pre-Installation Site and Product Check	4
Concealed Header Installation	5
Surface Header Installation	6
AC Power and Ground Wiring	8
Operator Installation	9
Pivot Block Installation	10
Breakaway or Fixed Stop Installation	11
Control Box Installation	12
Control Box Wiring	13
Finger Guard Installation	16
Center Pivoted Door and Arm Installation	17
Push, Pull, and Offset Arm Installation	19
Glazing	19
Control Box Functions	19
Header Dress Plate Installation	20
Release for Service	20

GENERAL

The Astro/Senior/Mid-Swing is an automatic electromechanical swinging door operator for a single door or simultaneously operated pair of doors. The concealed application operates center pivoted or butt hung/hinged doors. The surface application operates balanced, offset pivoted, or butt hung/hinged doors in either push or pull mode.

When activated, the Astro/Senior/Mid-Swing drives the door to the full open position, then electrical power is turned off and the door is closed by spring force. The activating circuit opens the door from any position in the closing swing. During a power failure, the swing acts as a manual door closer (Astro/Senior as size 3, Mid as size 2). Door opening and closing cycles, including opening speed, back check speed, hold open time delay, closing speed, and latch position, are adjustable.

1. PRE-INSTALLATION SITE AND PRODUCT CHECK




IMPORTANT


Do not install the Astro/Senior/Mid-Swing unless all of the following conditions are correct.

- 1.1. Check that the product model is correct for the required application.
- 1.2. Check that all parts listed on the bill of material are in the shipping container.
- 1.3. Check architectural and final approved shop drawings for position of frame and openings.
- 1.4. For concealed applications, check that the opening allows 1/4" at each side and at the top so that the frame and the header can be plumbed square and caulked.
- 1.5. Check for sufficient header clearances:

Surface Application (Push System Shown)

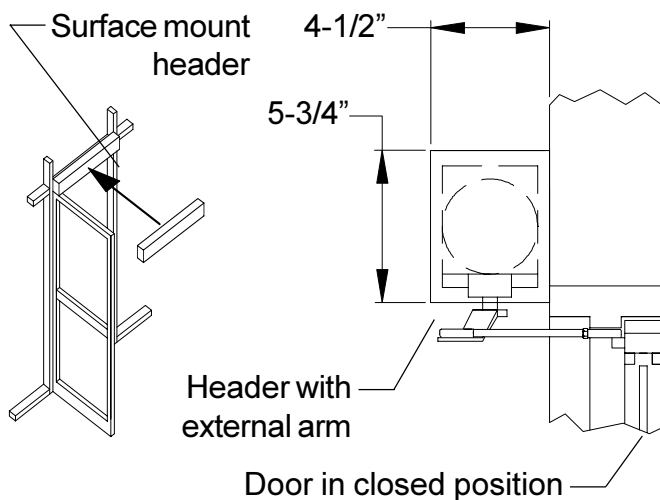

Concealed Application

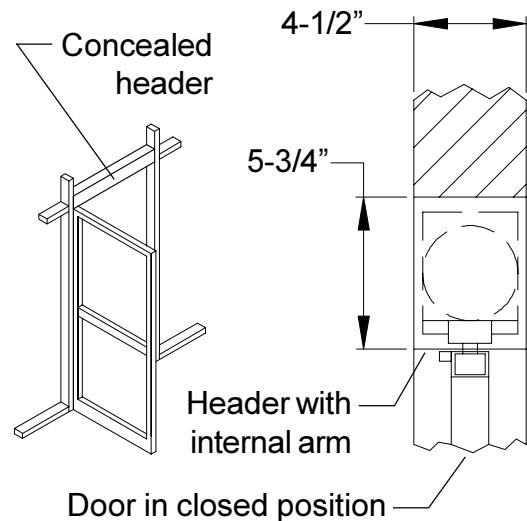

- 1.6. For a ramped floor, check that the break in the grade occurs at the edge of the 2" threshold and slopes away from the entrance to allow proper door swing or panic breakaway.
- 1.7. Check that a 115 volt, single phase, 60 Hz, fused, 15 amp, 3-wire power supply is available at the side jamb with approximately 12" of wire available to connect to the operator. UL approved type flexible conduit is recommended for the 115 volt power line.

The 115 volt power supply must be a dedicated circuit from the main circuit breaker panel and **must not** be connected into a building lighting system operating fluorescent lights.

For concealed applications, continue with "2. Concealed Header Installation" (page 5).

For surface applications, continue with "3. Surface Header Installation" (page 6).

2. CONCEALED HEADER INSTALLATION



NOTE

Install **concealed application** headers so there is 1/8" between the bottom of the header and the top of the door.

2.1. Prepare jamb tubes:

Factory supplied jamb tubes: Factory supplied jamb tubes are already prepared for header installation, and Riv-nuts are already installed in the jamb tubes.

Existing jamb tubes: Prepare existing jamb tubes using template 81306-684, then install four 1/4-20 Riv-nuts inside each jamb tube.

2.2. Align the header with the jamb tubes. For headers with a single operator, position the end of the header containing the operator brackets near the pivot side of the opening (Figure 2-1). Secure the header to the jamb tubes with four 1/4-20 hex head screws at each end (Figure 2-2).

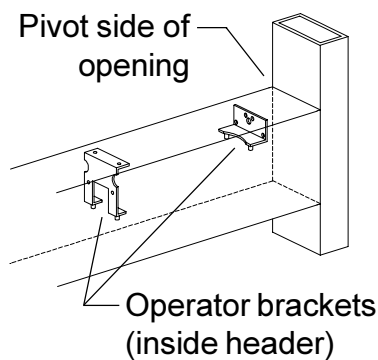


Figure 2-1

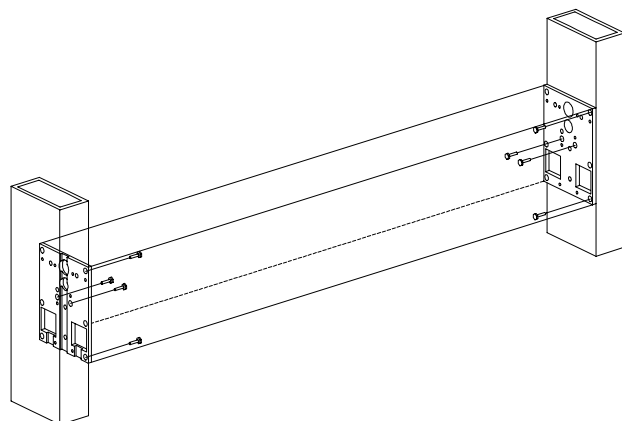


Figure 2-2

- 2.3. Stand the header/jamb tube assembly in the opening.
- 2.4. Feed the 115 volt power conduit into the header (Figure 2-3). Leave 12" minimum of wire inside the header for final hookup.
- 2.5. Shim and square the side jamb tubes in position, then secure the jamb tubes in the opening.

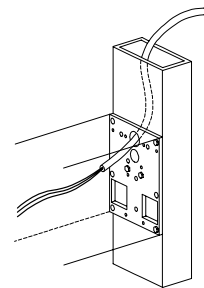


Figure 2-3

Continue with "4. AC Power and Ground Wiring" (page 8).

3. SURFACE HEADER INSTALLATION

- 3.1. For a header with two operators (for a simultaneously operated pair of doors), designate one end of the header as the slave operator end. (It does not matter which end is the slave operator end.)
- 3.2. Refer to Figure 3-1 and step 3.3 and prepare wire access holes appropriate for the application in the header using template 91194-684. Be sure to position edge "A" of template 91194-684 as shown in Figure 3-1.

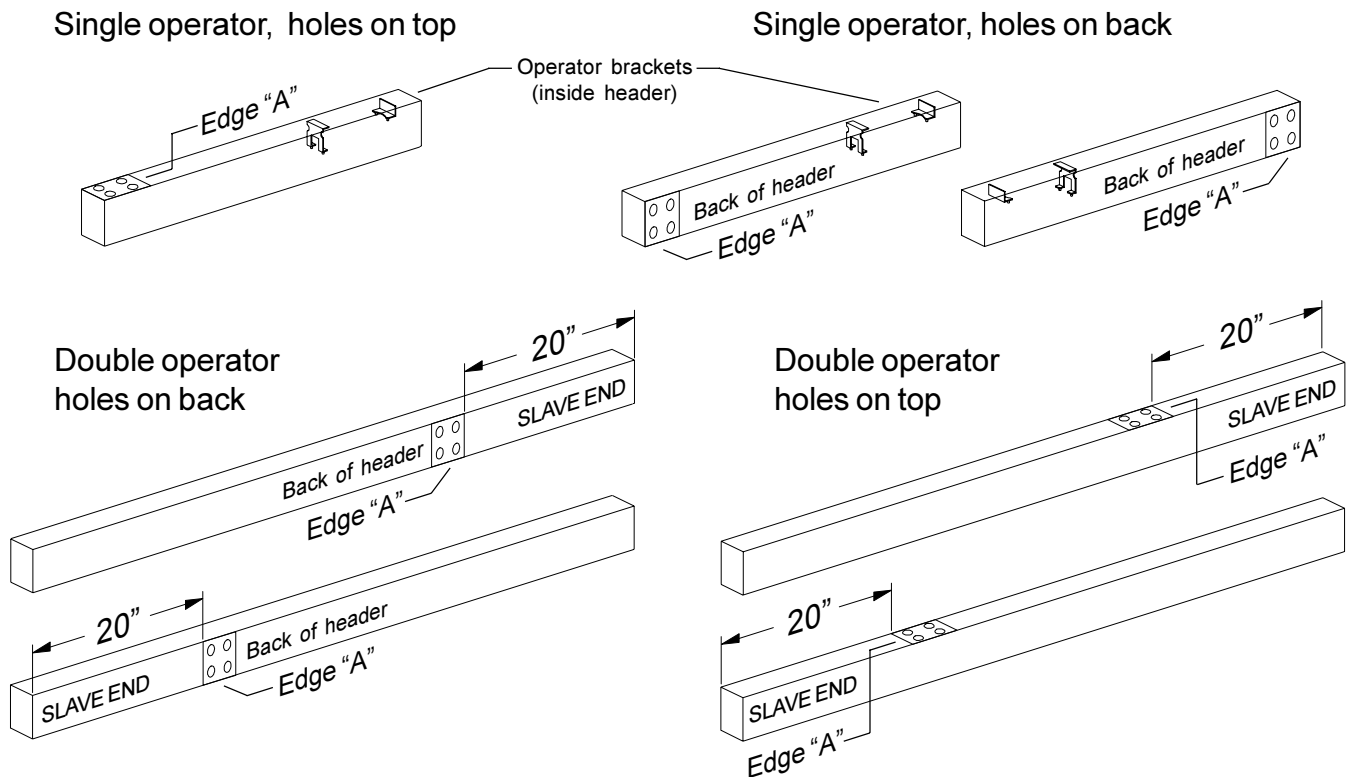


Figure 3-1

- 3.3. Install horizontal mounting brackets on the header per the instructions supplied with the brackets (Figure 3-2). Make sure the horizontal mounting brackets are oriented so the wire access holes in the header (see step 3.2) face up or face the door and, for single operator headers, the operator brackets inside the header are near the hinge side of the opening.

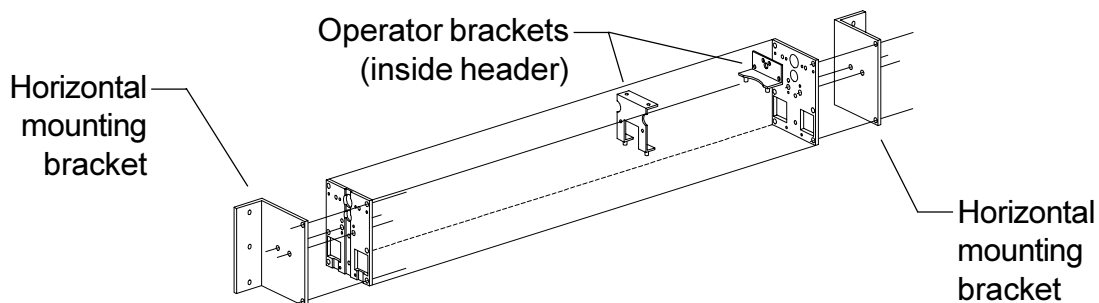


Figure 3-2

3. SURFACE HEADER INSTALLATION (continued)



NOTE

Install **surface application** headers so there is 1" between the bottom of the header and the top of the door.

- 3.4. Install the header with horizontal mounting brackets to the jambs per the instructions supplied with the horizontal mounting brackets (Figure 3-3).

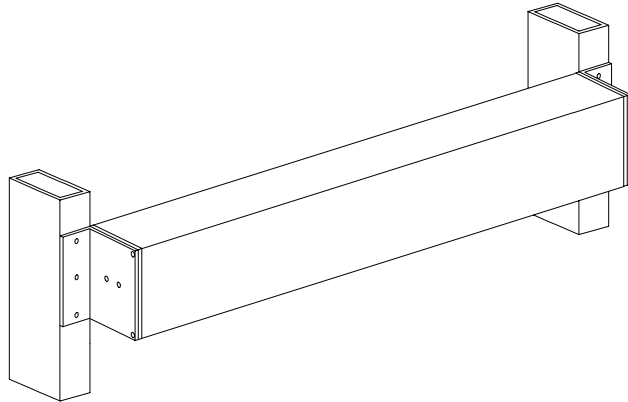


Figure 3-3

- 3.5. Feed the 115 volt power conduit into the header (Figure 3-4). Leave 12" minimum of wire inside the header for final hookup.

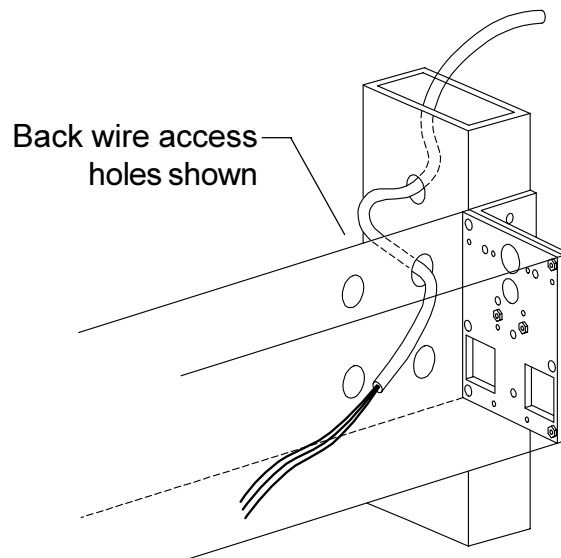


Figure 3-4

Continue with "4. AC Power and Ground Wiring" (page 8).

4. AC POWER AND GROUND WIRING

- 4.1. Connect the 115 volt power hot and neutral wires to the power supply wire harness 81275-000 as shown in Figure 4-1.

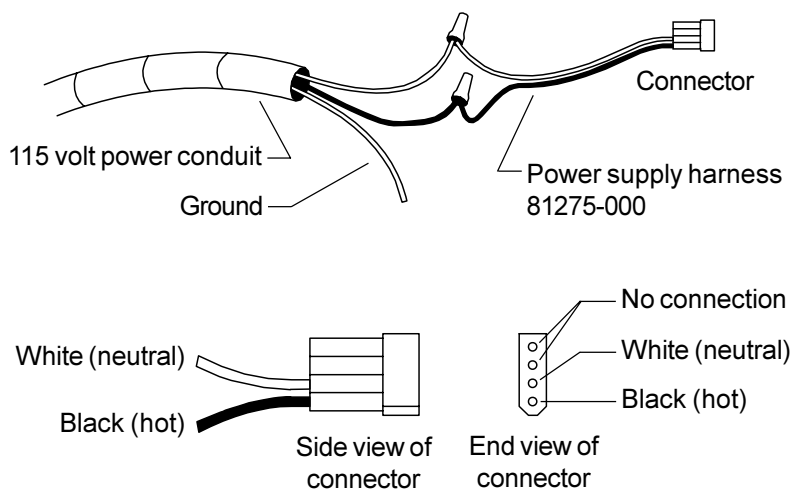


Figure 4-1

- 4.2. Connect the 115 volt power ground wire to the header end plate where shown in Figure 4-2.
- 4.3. Connect the control box ground wire 85009-600 to the header end plate where shown in Figure 4-2. Do not connect the other end of this wire at this time.

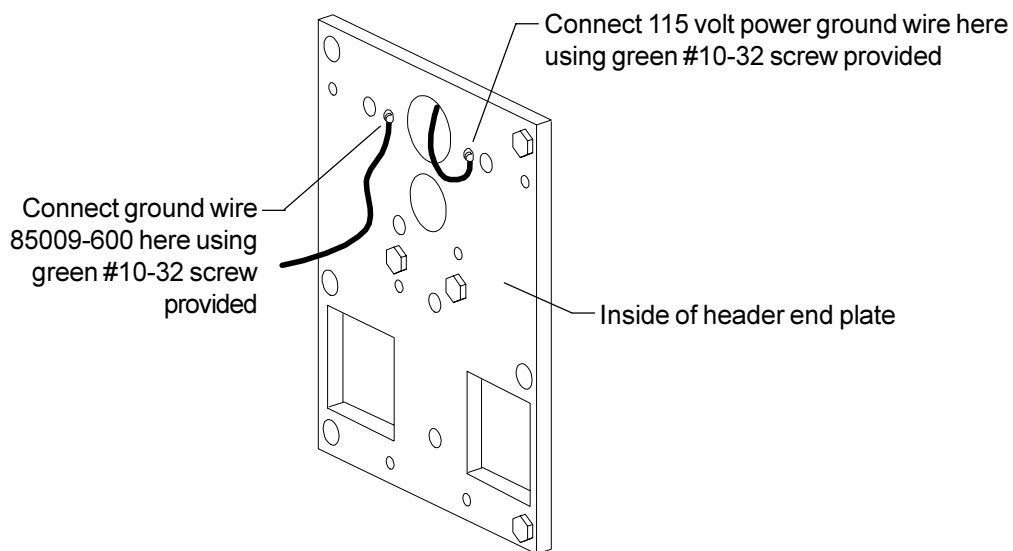


Figure 4-2

Continue with “5. Operator Installation” (page 9).

5. OPERATOR INSTALLATION

- 5.1. For double operator systems with differently handed operators, make sure that the correct operator is installed in each end of the header. The handing of the operator (R.H. or L.H.) is indicated on a label on the operator.
- 5.2. For ease of installation, disconnect the green operator ground wire 85010-600 from the operator and connect the other end of this wire to the rear operator mounting bracket in the header (Figure 5-1).
- 5.3. Check that there is a rubber grommet inside each of four mounting holes on the operator (Figure 5-2).
- 5.4. Line up the four mounting holes on the operator with the four mounting studs on the operator brackets (Figure 5-3). Make sure that the operator cable (with 6-pin connector) is hanging down freely and push the operator up onto the mounting studs. Make sure cables are not pinched when operator is installed. (The mounting studs fit snugly into the grommets, and firm pressure may be required to get the operator into position.)
- 5.5. Secure the operator to the header using four 5/16-18 hex head screws and washers (Figure 5-3). Tighten the screws until they make contact with the mounting studs on the operator brackets.
- 5.6. Reconnect to the operator the green ground wire that was disconnected from the operator in step 5.2 (Figure 5-3).
- 5.7. For a header with two operators, install the second operator in the same manner.

For center pivoted doors, continue with “6. Pivot Block Installation” (page 10).

For other doors, continue with “8. Control Box Installation” (page 12).

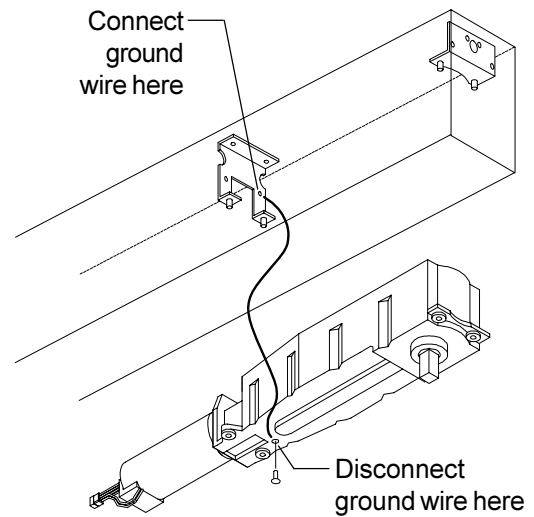


Figure 5-1

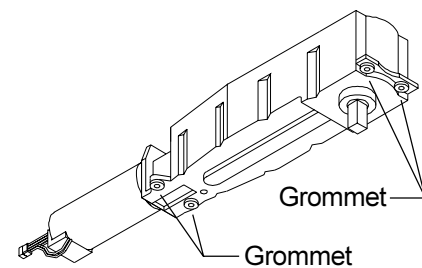


Figure 5-2

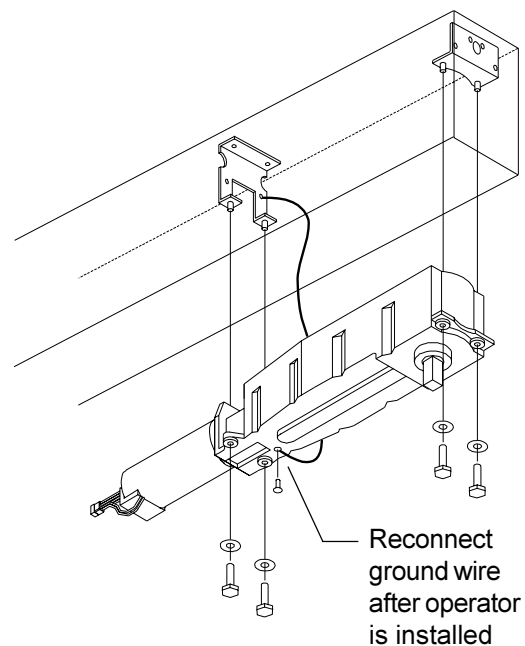


Figure 5-3

6. PIVOT BLOCK INSTALLATION




NOTE

This section is applicable ONLY if using the Dor-O-Matic supplied lower pivot block (with pivot post attached) on center pivoted, interior doors. If not being used, continue with "7. Breakaway or Fixed Stop Installation" (page 11).

- 6.1. Position the lower pivot block (Figure 6-1) as shown in Figure 6-2 oriented so the pivot post is 2-3/4" or 3-3/4" (nominal) from the jamb, as necessary.
- 6.2. Use the pivot block as a guide and mark and prepare four mounting holes for appropriate fasteners for the mounting surface.
- 6.3. Secure the pivot block in place with appropriate fasteners (Figure 6-3).

Continue with "7. Breakaway or Fixed Stop Installation" (page 11).

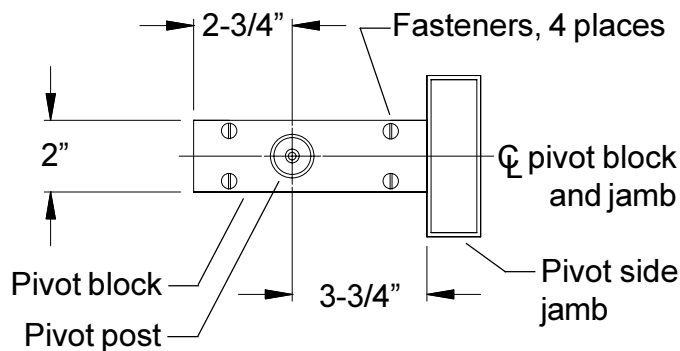

NOTE

Pivot block shown installed for a door with a 3-3/4" mounting point. For 2-3/4" mounting point, reverse pivot.

Figure 6-1. Top view of lower pivot block.


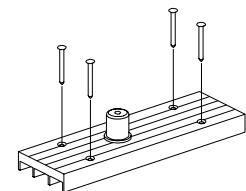


Figure 6-3

Figure 6-2

7. BREAKAWAY OR FIXED STOP INSTALLATION

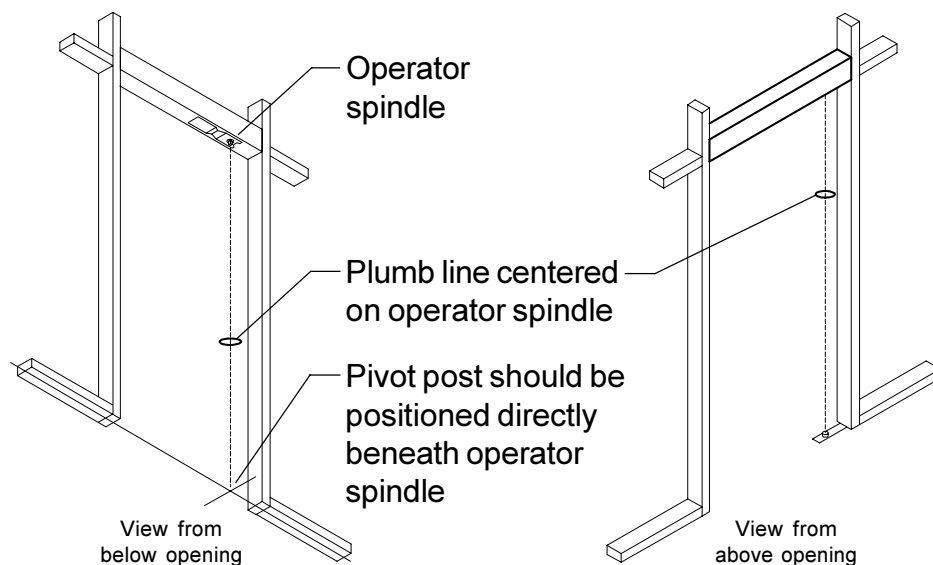

NOTE

This section is applicable **ONLY** to center pivoted doors using the Dor-O-Matic supplied breakaway or fixed stop. If not being used, continue with “8. Control Box Installation” (page 12).

Breakaway and Fixed Stop Operation

The function of the breakaway or fixed stop is to act as a mechanical stop on an inswinging door so the door cannot normally be opened in the outswinging direction.

The **breakaway stop** differs from the fixed stop in that, in a panic or fire condition, when approximately 50 lbs. of force is applied on the door from the inswinging side, the door will open in the outswinging direction. When this occurs, a switch in the breakaway stop disables the automatic operation of the door. The door then remains inoperative and in the breakaway position until it is manually pushed back through the opening to the inswinging side. This action resets the breakaway stop and restores automatic operation.

- 7.1. Orient the breakaway stop according to the directions on the switch label (Figure 7-1). The “OPENING DIRECTION OF DOOR” arrow should point in the direction that the door opens during normal operation.

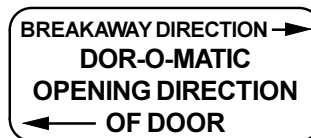


Figure 7-1

- 7.2. Install the breakaway or fixed stop inside the header approximately 2-1/4” from the latch end using the four #8-32 x 3/4” screws supplied with the stop (Figure 7-2). Mounting holes for the stop have been prepared in the header at the factory.

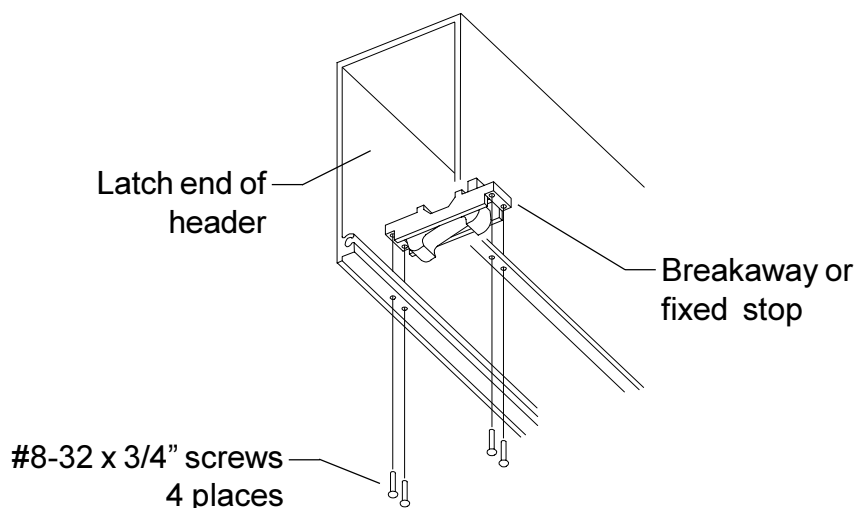


Figure 7-2

Continue with “8. Control Box Installation” (page 12).

8. CONTROL BOX INSTALLATION

- 8.1. Orient the control box so the switches face down and the 6-pin Molex connector faces the operator for a single system or the master operator for a double system (Figure 8-1).
 - 8.2. Raise the control box into the header and rotate the two mounting bars so they engage the slots that run the length of the header (Figure 8-2).
 - 8.3. See Figure 8-3 for final positions of operator(s) and control box inside the header.
- Continue with “9. Control Box Wiring” (page 13).**

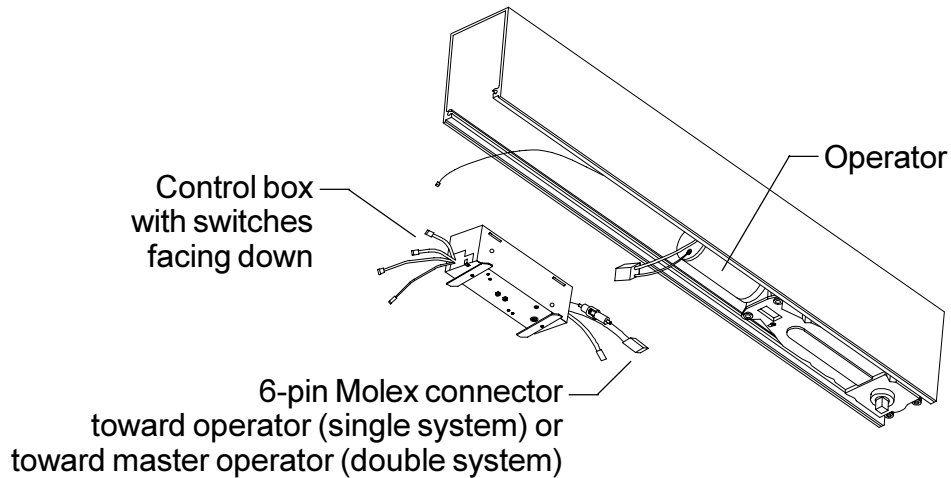


Figure 8-1


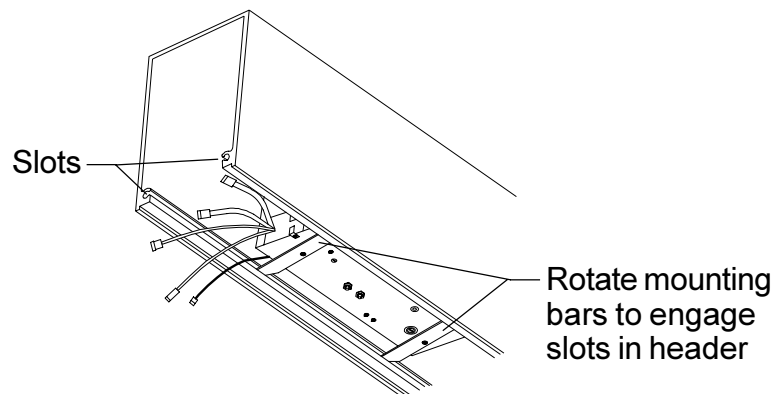


Figure 8-2

 

Views from front of header,
wire access holes shown on back of header

Figure 8-3

9. CONTROL BOX WIRING



CAUTION

High voltage wiring must be separated from low voltage wiring by using UL listed wiring for the control box, operators, and low voltage accessories.



CAUTION

When joining or separating a Molex plug and receptacle, do not push or pull on any of the wires. This may cause a wire to be pulled loose from a terminal, which may result in a malfunction.

- 9.1. Connect the control box to the motor/gearbox operator by gently dressing the motor wiring harness and 85398-000 or 85398-090 into an “S” shape over the motor and connecting the 6-pin Molex connectors.
- 9.2. Connect the control box ground wire 85009-600 (already attached to the header end plate) to the spade terminal on the control box chassis (Figure 9-1).
- 9.3. Connect the four remaining connectors (see Figure 9-2 for a single operator or Figure 9-3 for a double operator). The arrangement of the plugs and receptacles prevents incorrect joining.
- 9.4. Dress all wires neatly together. Use the stick-on cord-clips 81314-600 to retain wires in their proper locations and add cord-clips on both sides of the fuse holders to prevent shifting.

For center pivoted doors, continue with “10. Finger Guard Installation” (page 16).

For other doors, continue with “12. Push, Pull, and Offset Arm Installation” (page 19).

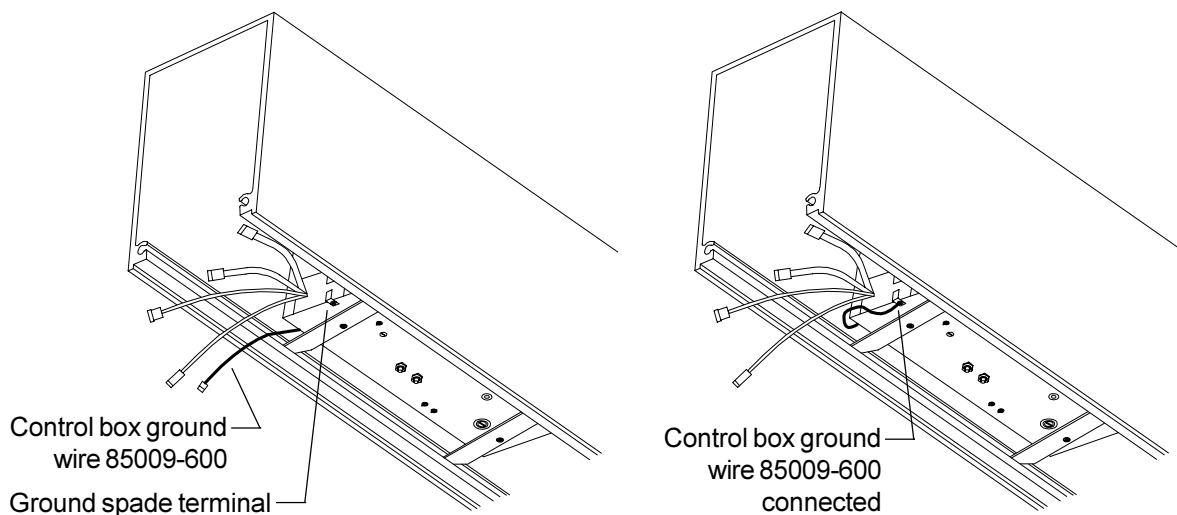


Figure 9-1

SINGLE OPERATOR WIRING


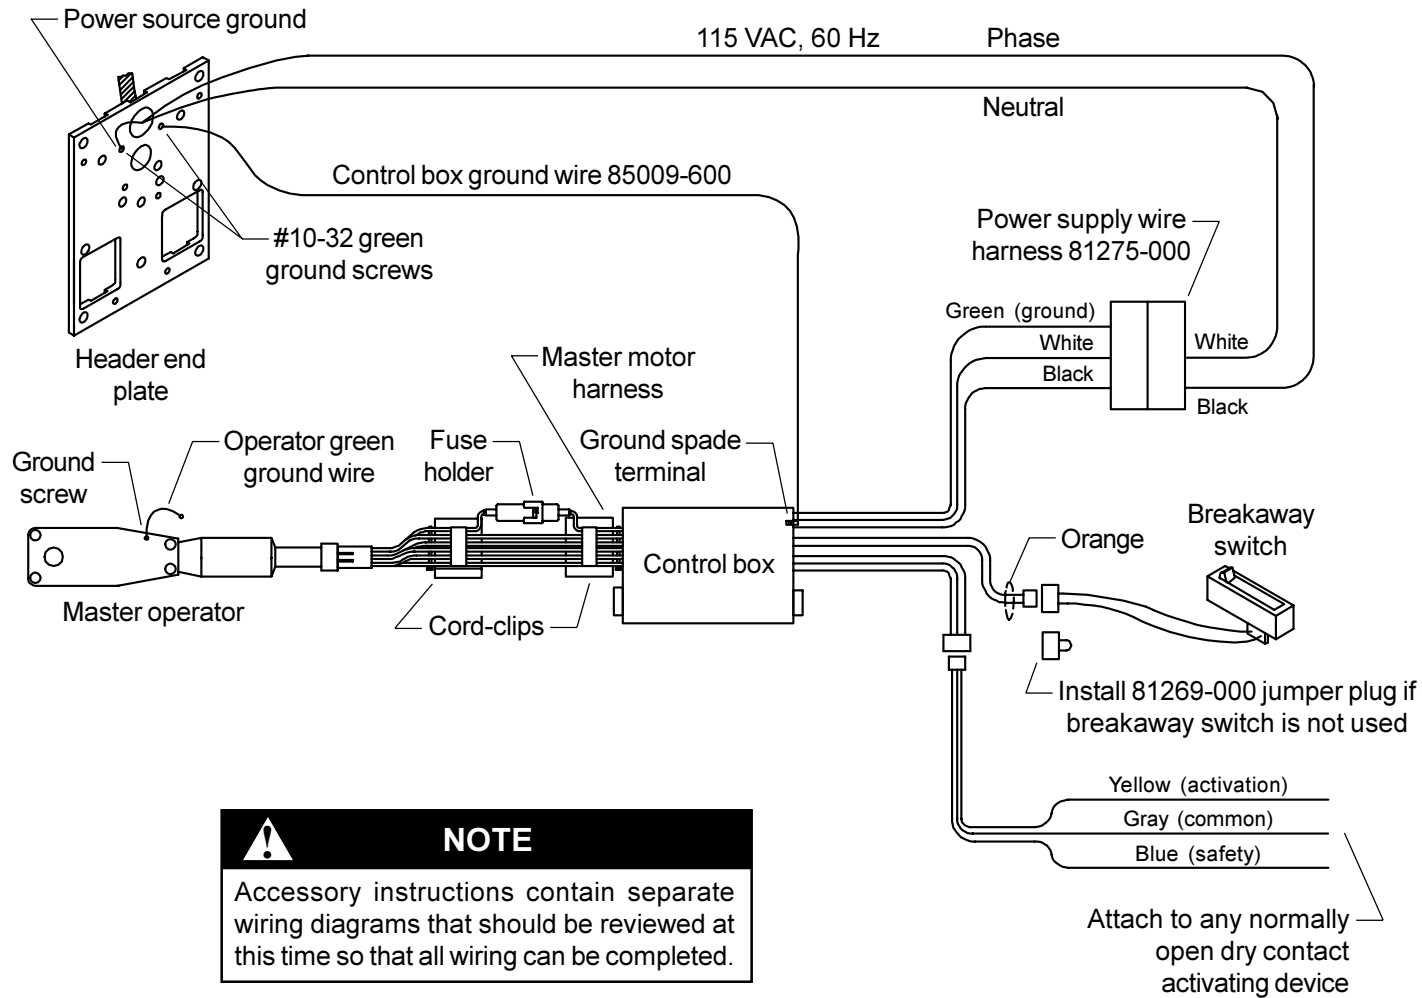



Figure 9-2

DOUBLE OPERATOR WIRING

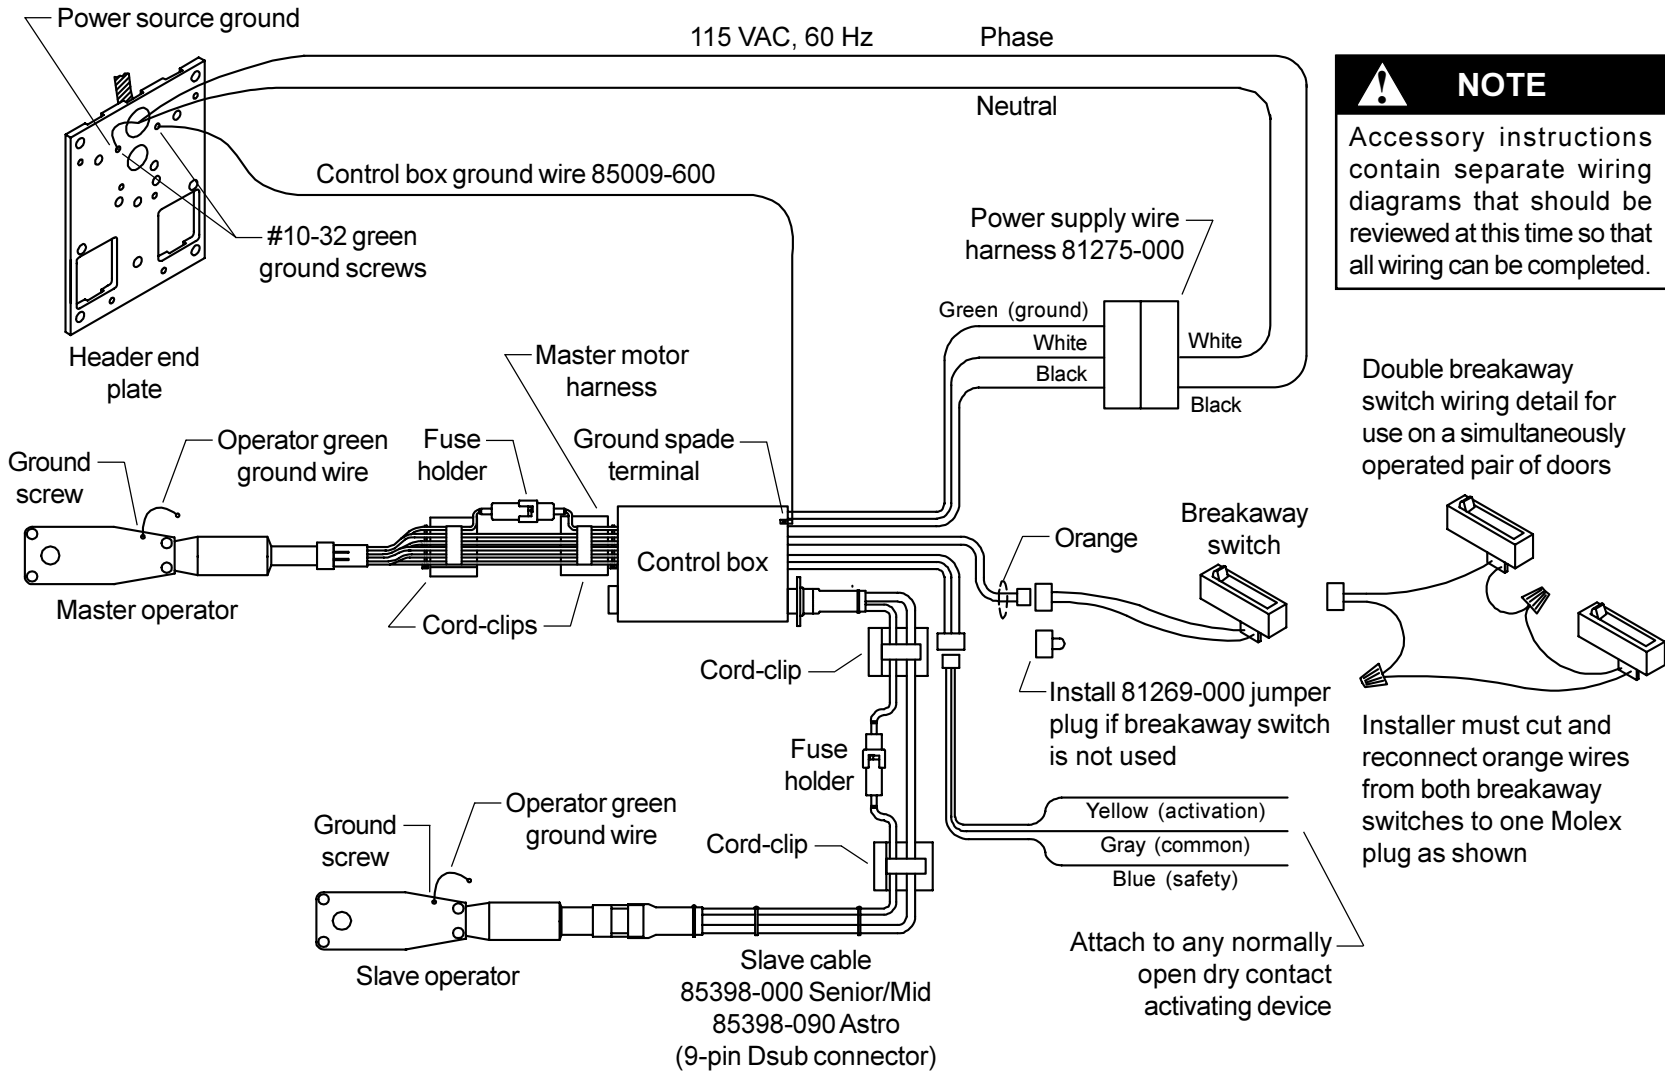

NOTE
 Accessory instructions contain separate wiring diagrams that should be reviewed at this time so that all wiring can be completed.

Double breakaway switch wiring detail for use on a simultaneously operated pair of doors

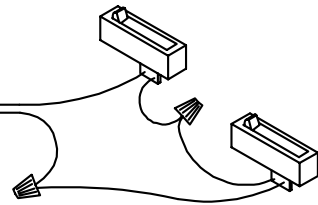

Installer must cut and reconnect orange wires from both breakaway switches to one Molex plug as shown

Attach to any normally open dry contact activating device

Figure 9-3

10. FINGER GUARD INSTALLATION



NOTE

This section is applicable **ONLY** to center pivoted doors using the Dor-O-Matic supplied finger guard. If not being used, continue with “11. Center Pivoted Door and Arm Installation” (page 17).

- 10.1. Scribe a line down the center of the pivot side door jamb (Figure 10-1).
- 10.2. If necessary, cut down the finger guard to fit the installation.
- 10.3. Align the center of the finger guard over the scribed line. Use the screw holes in the finger guard as guides to locate the mounting holes, and drill #21 (0.159” dia.) mounting holes in the door jamb.
- 10.4. Secure the finger guard to the door jamb with #10 self-threading screws.
- 10.5. Make sure there is one mounting screw approximately 1” from each end of the finger guard. If necessary, drill additional mounting holes in the finger guard and door jamb in these locations and install #10 self-threading screws.

Continue with “11. Center Pivoted Door and Arm Installation” (page 17).

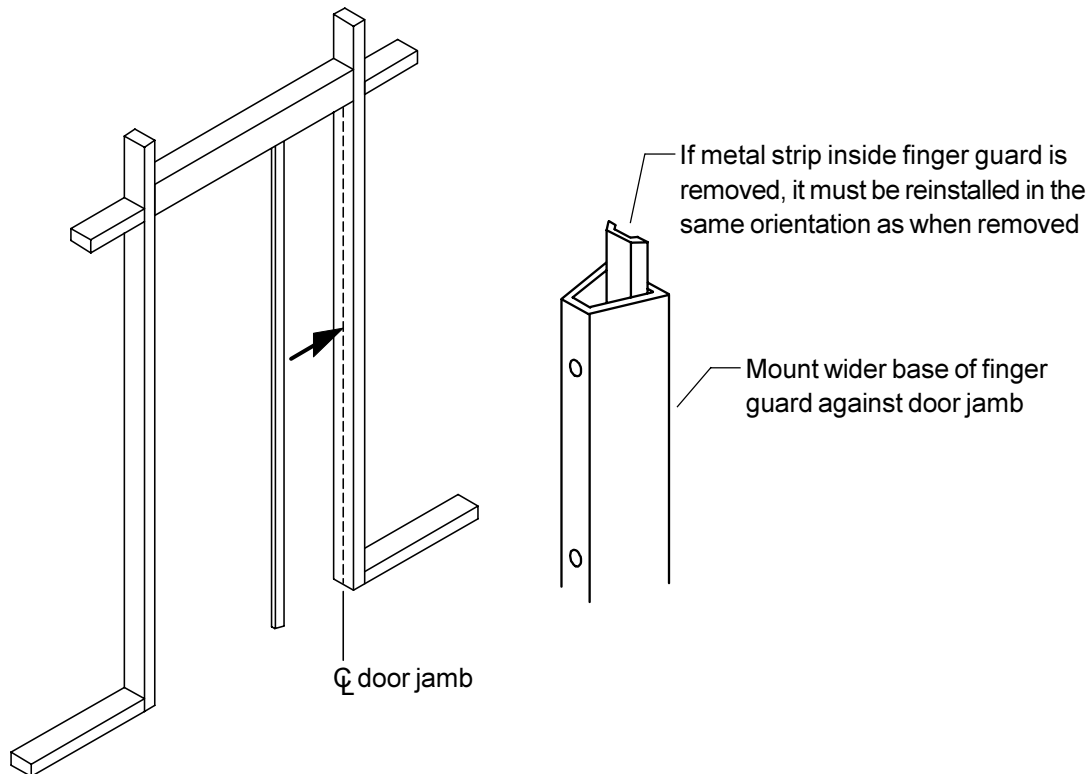


Figure 10-1

11. CENTER PIVOTED DOOR AND ARM INSTALLATION

- 11.1. Doors manufactured by Dor-O-Matic are factory prepared for all required hardware. If another type of door is being used, prepare it per template 880-I (available from factory).
- 11.2. For center pivoted doors, install top arm attachment bar and bottom pivot assembly using screws supplied with those components (Figure 11-1).

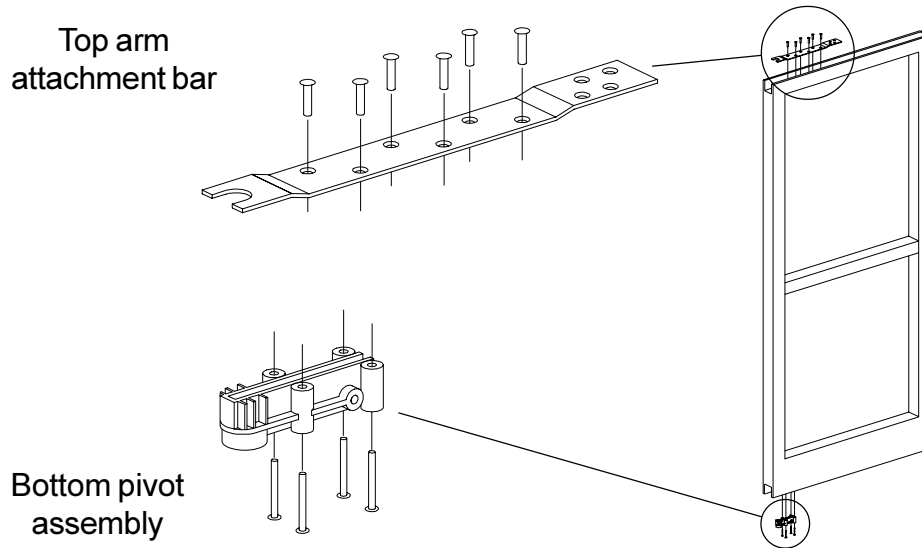


Figure 11-1

- 11.3. The operator is shipped from the factory with the spindle in the breakout position, so the arm must be oriented in the breakout position when installed on the spindle. Before installing the arm, determine the arm breakout position (Figure 11-2).
- 11.4. Orient the arm in the breakout position and press the arm onto the spindle until the end of the spindle is flush with the bottom surface of the arm, then tighten the Allen head cap screw on the arm (Figure 11-3).

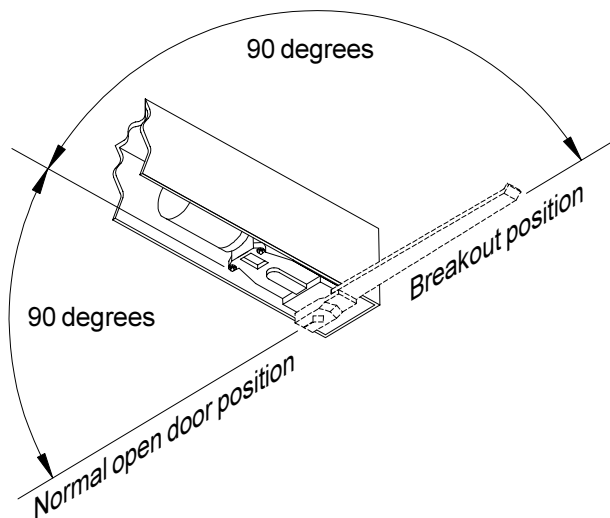


Figure 11-2

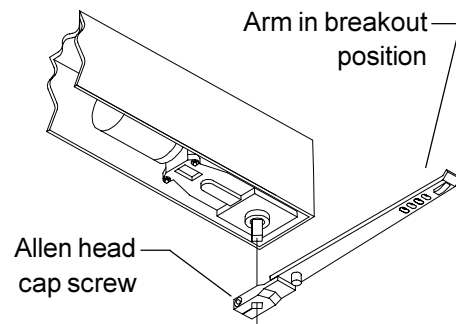


Figure 11-3

11. CENTER PIVOTED DOOR AND ARM INSTALLATION (continued)

11.5. Position the door so the arm is in the top channel of the door and gently slide the door up against the lower pivot (Figure 11-4).

11.6. Lift the door slightly and push back until the bottom pivot locks into place.

11.7. Raise the nose of the door and push back until the top arm snaps into place.

11.8. Align the door in the open position (perpendicular to the opening).

11.9. Install two 1/4-20 x 1/2" hex head cap screws and washers through two of the oval holes in the arm and into the top attachment arm (Figure 11-5). Install screws in whichever of the positions shown align with the door in the open position (perpendicular to the opening).

11.10. Check door operation by pushing door to normal closed position, continue pushing through breakaway stop to 90 degree open position, and then release door. Door should close.

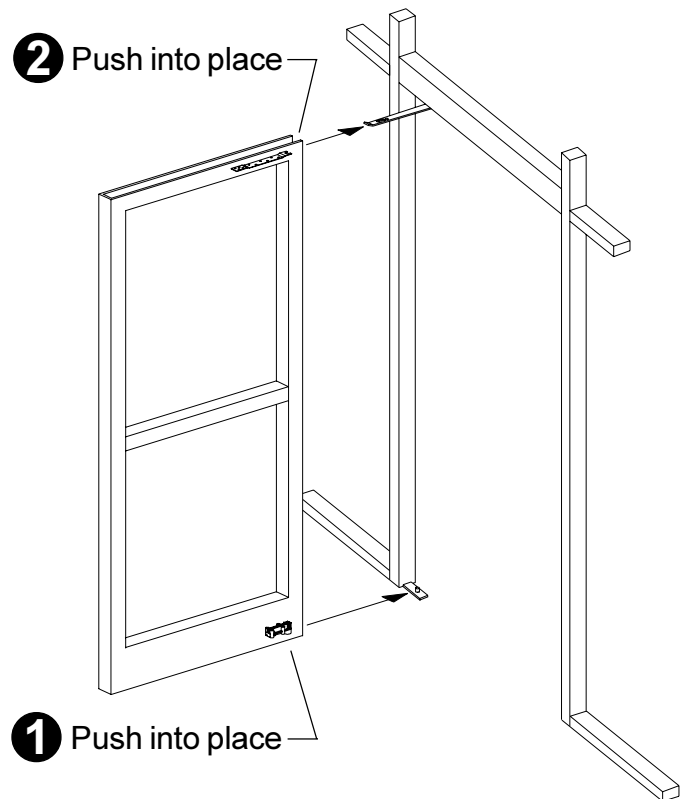


Figure 11-4

CAUTION
If the operator is not connected to the control box, the door will slam closed when released.


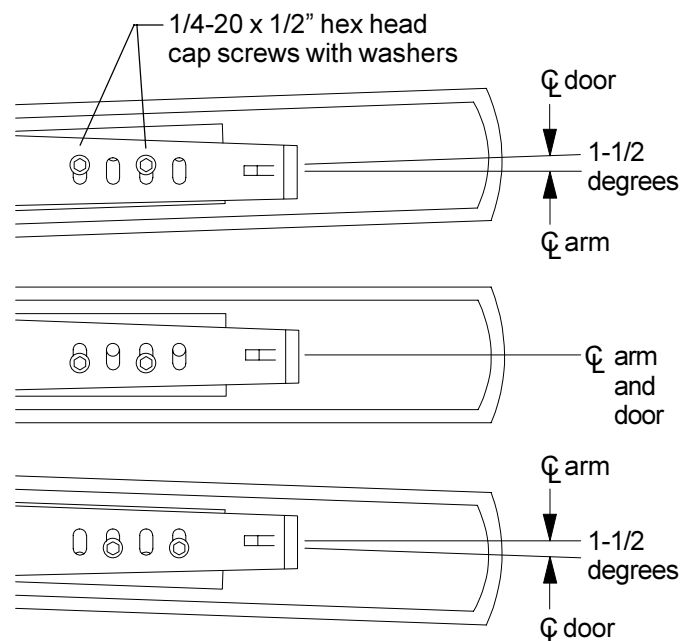


Figure 11-5


Continue with "13. "Glazing," (page 19).

12. PUSH, PULL, AND OFFSET ARM INSTALLATION

Push Arm: For surface header applications.
To install, see separate instructions for
81460-9XX Push Arm & Link Assembly.

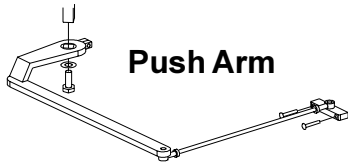


Pull Arm: For surface header applications.
To install, see separate instructions for
81470-9XX Pull Arm Assembly.

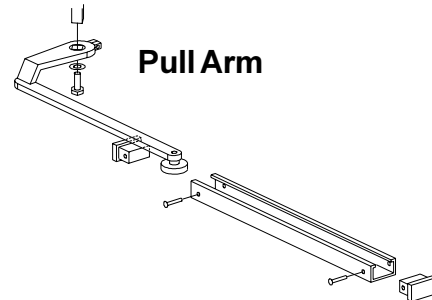

Offset Arm: For concealed header applications with butt hung and offset pivoted doors. To install:

1. Prepare door and install slide channel (see separate Installation Instructions for 87400-XXX Arm).
2. Note position of operator spindle. Turn on operator power. Momentarily short activation wires so spindle slowly rotates toward full open position and stops. Continue doing this until spindle reaches full open position (refer to Figure 11-2), then join activation wires together with a wire nut.
3. Insert arm slide into slide channel, slide arm onto spindle, and tighten arm Allen head cap screw.
4. Remove wire nut from activation wires; turn off power.

Continue with "13. Glazing."

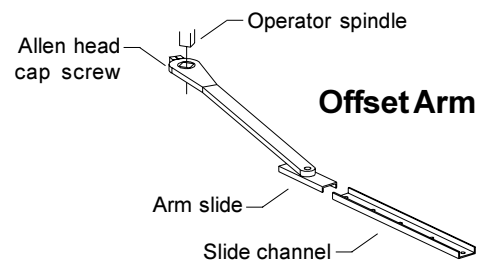

13. GLAZING



CAUTION

Glazing material must comply with the ANSI standard specification.



CAUTION

Operator speed adjustments cannot be set properly until after the door is glazed.

Continue with "14. Control Box Functions."

14. CONTROL BOX FUNCTIONS

Refer to separate control box instructions supplied with the control box to set control box functions.

Continue with "15. Header Dress Plate Installation" (page 20).

15. HEADER DRESS PLATE INSTALLATION

- 15.1. For concealed header applications using offset arm with butt hung and offset pivoted doors **only**, prepare header dress plates for concealing channel (Figure 15-1; see separate Installation Instructions for 87400-XXX Arm).
- 15.2. Install spindle plate and filler plate (Figure 15-2). Spindle plate cutout fits over operator spindle.
- 15.3. For concealed header applications using offset arm with butt hung and offset pivoted doors **only**, install concealing channel (Figure 15-1).

Continue with “16. “Release for Service.”

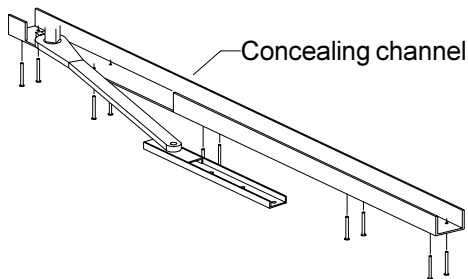


Figure 15-1

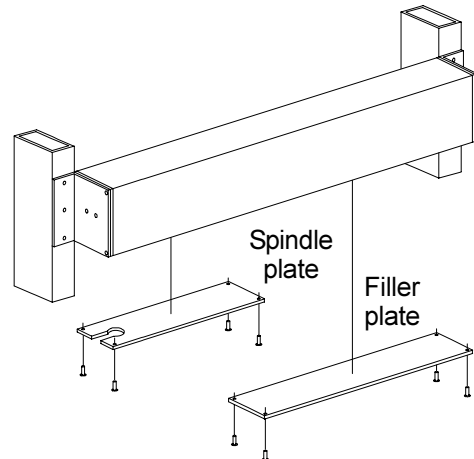


Figure 15-2

16. RELEASE FOR SERVICE

- 16.1. Remove all tools, installation equipment, and debris from the vicinity of the door.
- 16.2. Install all safety, traffic control, and instruction decals on the door as required by the latest revision of ANSI/BHMA A156.10 for the Astro or A156.19 for the Senior/Mid-Swing. **This is very important! Failure to do this leaves the installer LIABLE for any accident that might occur. This must be done!**
- 16.3. Verbally instruct the owner or person in charge of the proper operation of the door.
- 16.4. Instruct the owner or person in charge to routinely inspect the door for occasional damage, developing problems, minor preventive maintenance.
- 16.5. Instruct the owner or person in charge who and where to call for service when required.



IMPORTANT

Make sure to install all safety, traffic control, and instruction decals on the door as required.